

# Full automatic from WASHING through DRYING.

## NOTICE

- Once you put coins into the machine, the coins will not be returned.
- 100yen coin only. No change given.
- While the machine is operation, the door will be locked. It will be not open until it is finished.
- If drying feels insufficient, please operate "Dry more" course.

## 0. Before laundry[FREE]

Press [ドラム洗淨] button to wash the tub with Ag+ ion water.(1minute )



## 1. Ready to Start

Put your laundry in and shut the door properly.

No need to put in the detergent. Detergent will automatically pumped into the machine.

## 2. Select Course

The remaining time shows the approximate driving time.

It may increase or decrease in the middle depending on the driving situation.

	Wash & Dry(Regular)	Wash & Dry(Less)	Wash	Dry more
Capacity	less than 3kg	less than 1kg	less than 6kg	less than 3kg
Est. Time	120min	80min	35min	Press the button to add the time
Coins	500yen	400yen	300yen	100yen

### 3. Deposit Coins

Insert the coins and press [スタート] button to start.

### 4. Finish

“End” sign will be displayed when finished.